

DM-A18A/A18D 接口说明

Pin assignment:

J1:

- | | |
|-------------|------------|
| 1. AGND | 2. LOUT |
| 3. DGND | 4.ROUT |
| 5. POT1 | 6. LRIN |
| 7. 3.3V Out | 8. LRIN |
| 9. DGND | 10.DGND |
| 11. RC_BTN | 12. 5V IN |
| 13. RC_A | 14. AGND |
| 15. RC_B | 16. 15- IN |
| 17. NC | 18. 15+ IN |

J2(A18A, 16FX):

- | | |
|-------------|-------------|
| 1. NC | 2. LED |
| 3. FootSw | 4. NC |
| 5. NC | 6. NC |
| 7. NC | 8. NC |
| 9. NC | 10. NC |
| 11. NC | 12. NC |
| 13. NC | 14. NC |
| 15. 5V+ Out | 16. 5V+ out |
| 17. DGND | 18. DGND |

J2(A18D, 24FX):

- | | |
|-------------|-------------|
| 1. FootSw | 2. LED |
| 3. ON/OFF | 4. NC |
| 5. NC | 6. LED_E |
| 7. COM1 | 8. LED_D |
| 9. COM0 | 10. LED_C |
| 11. LED_F | 12. LED_B |
| 13. LED_G | 14. LED_A |
| 15. 5V+ Out | 16. 5V+ out |
| 17. DGND | 18. DGND |

Effects List(16FX):

- | | | | |
|------------------|------------------|-------------------|-----------------|
| 1 REVERB HALL 1 | 2 REVERB HALL 2 | 3 REVERB ROOM 1 | 4 REVERB ROOM 2 |
| 5 REVERB STAGE 1 | 6 REVERB STAGE 2 | 7 Ping-Pong Delay | 8 DRUM AMBIENCE |
| 9 KARAOKE ECHO | 10 VOCAL ECHO | 11 CHORUS 1 | 12CHORUS 2 |
| 13 FLANGER | 14 PHASER | 15 AUTO WAH | 16 DISTORTION |

Effects List(24FX):

- | | | | |
|------------------|------------------|--------------------|-----------------|
| 1 REVERB HALL 1 | 2 REVERB HALL 2 | 3 REVERB ROOM 1 | 4 REVERB ROOM 2 |
| 5 REVERB STAGE 1 | 6 REVERB STAGE 2 | 7 REVERB PLATE | 8 DRUM AMBIENCE |
| 9 Early Reflect | 10 GATE REVERB | 11 Single Delay | 12 Delay |
| 13 VOCAL ECHO | 14 KARAOKE ECHO | 15 PHASER | 16 FLANGER |
| 17 CHORUS 1 | 18 CHORUS 2 | 19 Ping-pong delay | 20 Tremolo |
| 21 Auto Wah | 22 Radio voice | 23 Distortion | 24 Pitch change |

