 
 
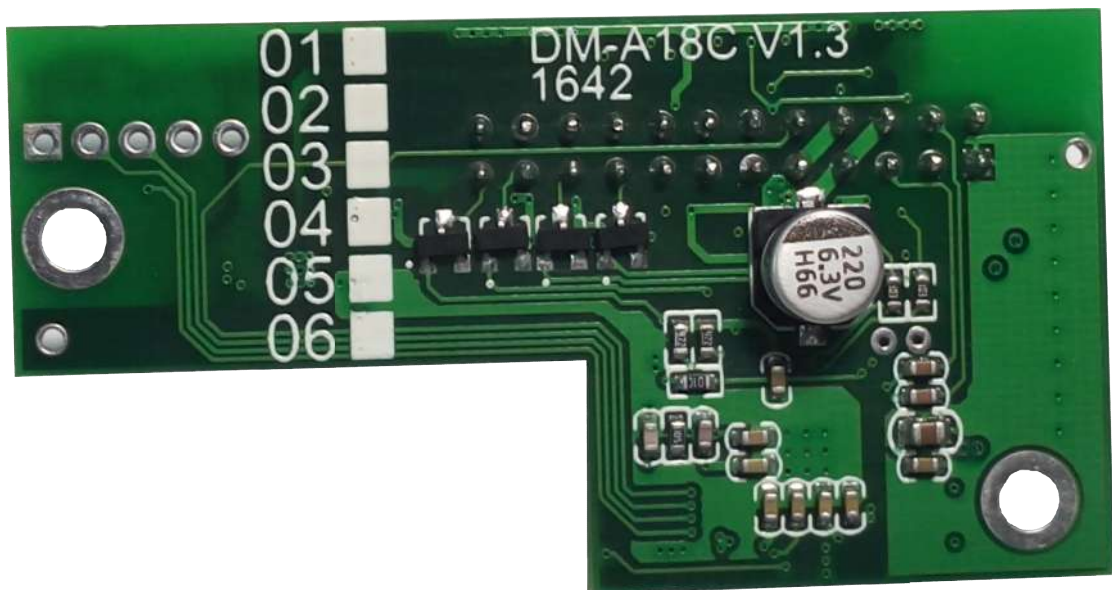 


## DM-A18C 应用资料:

 
 
### 1. 实物图

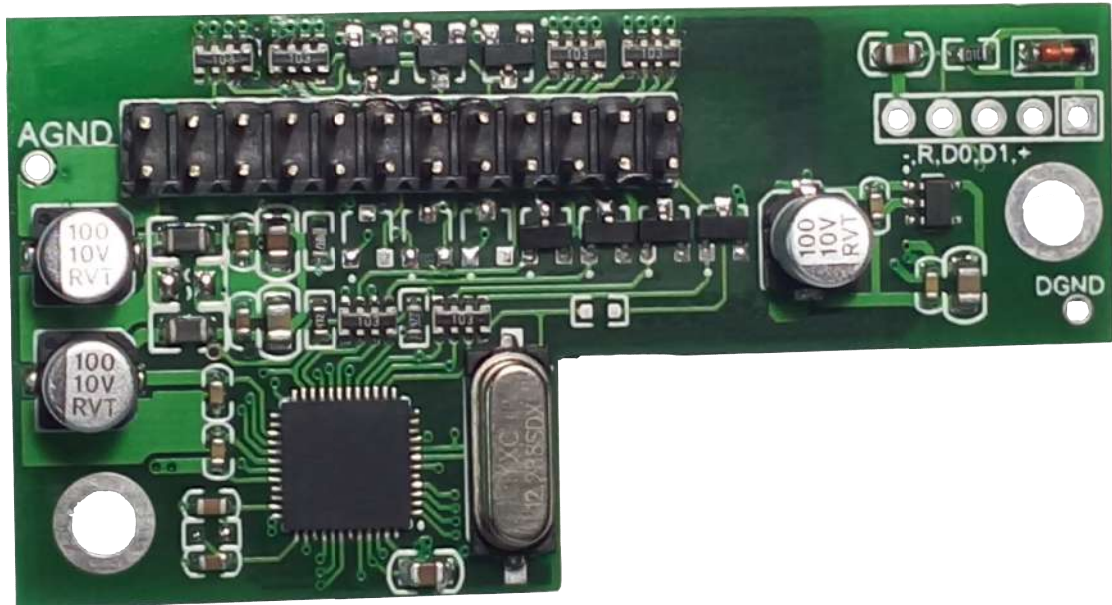

## 2. 接线图

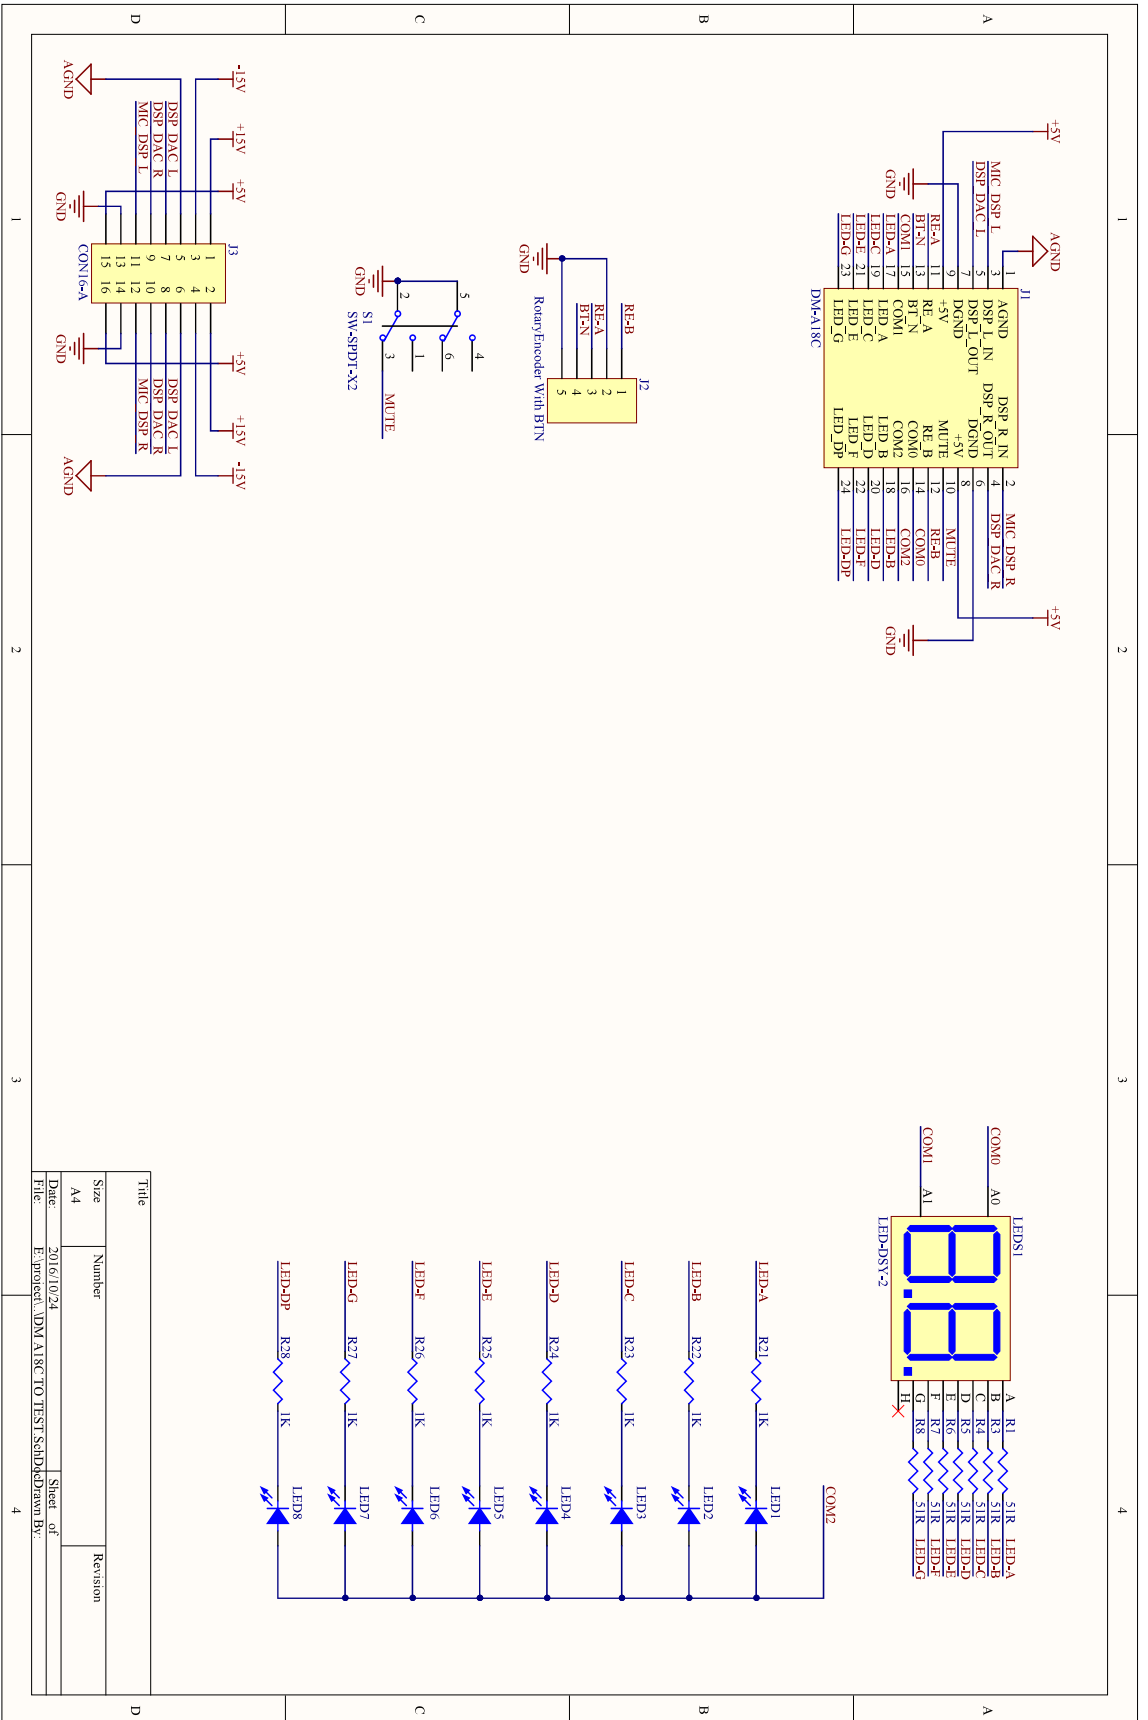

3. 尺寸图

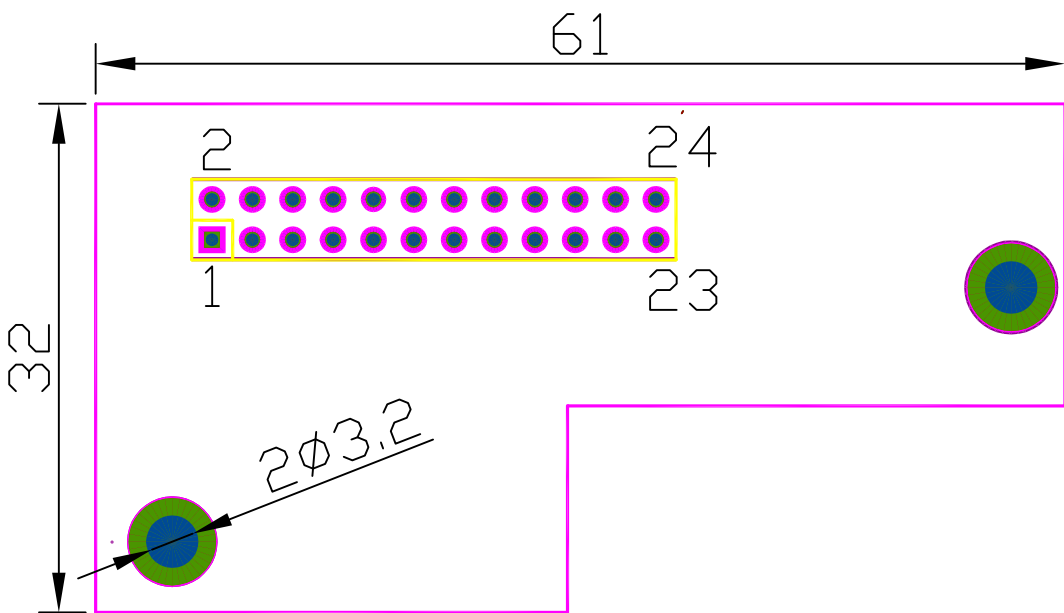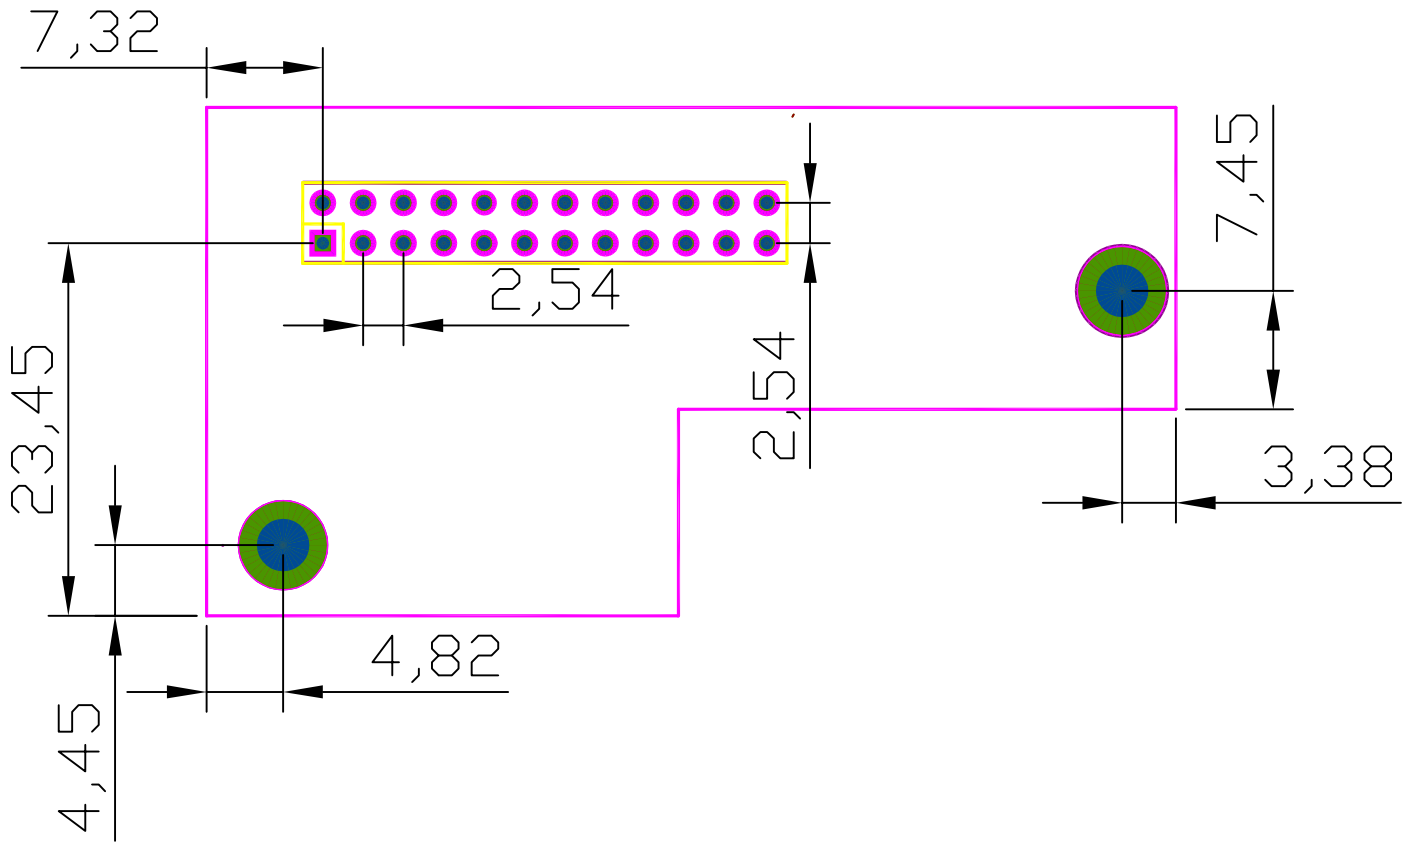

#### 4. 效果清单

48K, 24BIT ADC+DSP+24BIT DAC							
	Reverb		Early Ref/Delay		ECHO		Radio Voice
0	Bright Room Small	27	Early Ref Short	53	ECHO 1	78	Radio Voice Low
1	Bright Room Mid	28	Early Ref Mid	54	ECHO 2	79	Radio Voice Mid
2	Bright Room Large	29	Early Ref Long	55	ECHO 3	80	Radio Voice High
3	Warm Room Small	30	Slapback Rev Short	56	ECHO 4		<b>Pitch Shifter</b>
4	Warm Room Mid	31	Slapback Rev Mid	57	ECHO 5	81	PITCH -12
5	Warm Room Large	32	Slapback Rev Long	58	ECHO 6	82	PITCH -6
6	HALL Small	33	DELAY R3 Short	59	ECHO 7	83	PITCH -3
7	HALL Mid	34	DELAY R3 Mid	60	ECHO 8	84	PITCH -1
8	HALL Large	35	DELAY R3 Long	61	ECHO 9	85	PITCH +1
9	Ambience Small	36	DELAY R5 Short	62	ECHO 10	86	PITCH +2
10	Ambience Mid	37	DELAY R5 Mid		<b>Chorus/Flange</b>	87	PITCH +3
11	Ambience Large	38	DELAY R5 Long	63	Chorus 1 Slow	88	PITCH +6
12	Plate Small	39	DELAY R7 Short	64	Chorus 1 Mid		<b>Dis/ODr</b>
13	Plate Mid	40	DELAY R7 Mid	65	Chorus 1 Fast	89	Distorstion 1
14	Plate Large	41	DELAY R7 Long	66	Chorus 2 Slow	90	Distorstion 2
15	Gate Reverb Short	42	DELAY R9 Short	67	Chorus 2 Mid	91	Distorstion 3
16	Gate Reverb Mid	43	DELAY R9 Mid	68	Chorus 2 Fast	92	Over Driver 1
17	Gate Reverb Long	44	DELAY R9 Long	69	Flange Slow	93	Over Driver 2
18	Reverse Rev Short	45	DELAY R12 Short	70	Flange Mid	94	Over Driver 3
19	Reverse Rev Mid	46	DELAY R12 Mid	71	Flange Fast		<b>Multi FX</b>
20	Reverse Rev Long	47	DELAY R12 Long		<b>Tremolo</b>	95	Delay + Rev1
21	Church Small	48	DELAY R7 1.5s	72	Tremolo Little	96	Delay + Rev2
22	Church Mid	49	DELAY R40 1.5s	73	Tremolo Mid	97	Chorus1 + Rev
23	Church Large	50	Ping-Pong Dly Short	74	Tremolo Heavy	98	Chorus2 + Rev
24	Spring Rev Small	51	Ping-Pong Dly Mid		<b>Wah-Wah</b>	99	Delay + Chorus
25	Spring Rev Mid	52	Ping-Pong Dly Long	75	Auto Wah Little		
26	Spring Rev Large			76	Auto Wah Mid		
				77	Auto Wah Heavy		

5. 丝印内容:

0-26:Reverb	27-52:Early Ref/Delay
53-62:ECHO	63-71:Chorus/Flange
72-74:Tremolo	75-77:Wah-Wah
78-80:Radio Voice	81-88:Pitch Shifter
89-94:Dis/ODr	95-100:Multi FX